





Note that two bolts are used to secure the stile to the steps or platform. This will keep the uprights rigidly plumb. A block of wood is also attached to the upright stile to keep it rigid, and that makes it easy to make it just the right height as well.

At the same time, only one bolt is used in the top of the stile. That will allow the rail to be attached at an angle. If you are striking the show with the intention of putting it back up, you can leave the stiles and rail bolted together in one piece. Take out the bottom bolts, and fold up the rest of the handrail into one convenient unit.